


H9470


ڪ

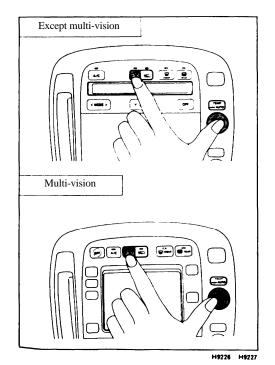


Indicator check

(1) Turn IG switch on.

(2) While pushing both AUTO and (picture) switch, Turn IG switch from OFF to ON or start the engine.

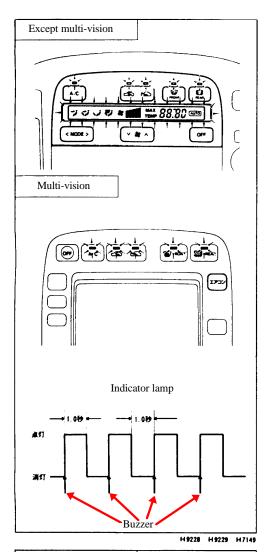

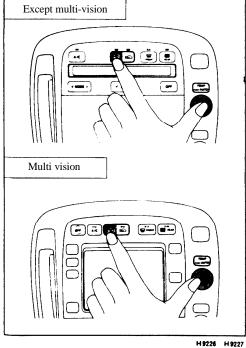


(3) All indication will illuminate as illustration, 4 times ON/OFF. And also buzzer will occur 4 times at the same time.

<Reference>


- 1. After indicator check, the system goes to sensor check automatically.
- 2. On the multi-vision, change to Airconditioning picture when try sensor check.
- (4) when you want to cancell a check mode, puch OFF switch.

Sensor check


- (1) Turn IG on.
- (2) While pushing both AUTO and (picture) switch as illustration, Turn IG from OFF to ON or start the engine.
- (3) On the multi-vision car, chenge a screen to the air conditioning indication.

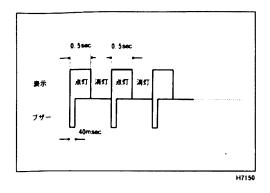

- (4) After indicator check, the system goes to sensor check mode automatically.
- (5) If there more than two DTC, you may push (picture) to scroll DTC.
- (6) Check the number of DTC that the indicator is showing.

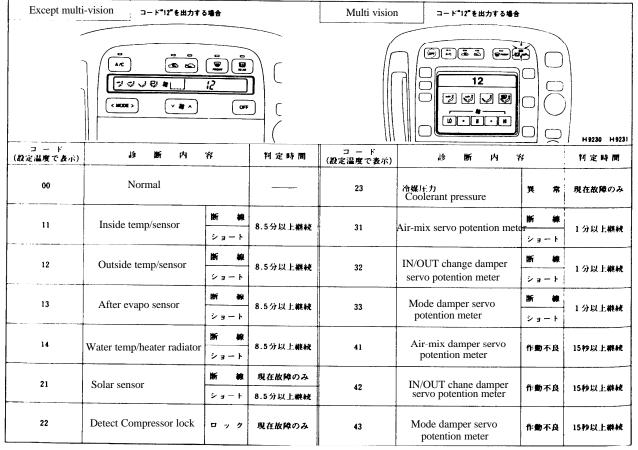

(7) センサーチェックを停止する場合は、OFFスイッチを押す。

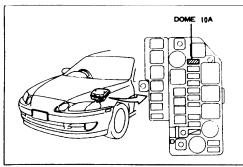

(8) Inspect all problem.

(9) To cancell DTC, remove DOME fuse $\{10A\}$ for more than 10 seconds.

(10) After cancell DTC, check indicator shows "00".

<Reference>


During sensor check mode, the system goes to actuator check mode when push a (picture) switch.




H 9232

アクチュエーターチェック

- (1) エンジンを始動し、十分暖機する。
- (2) IGスイッチをOFFにする。

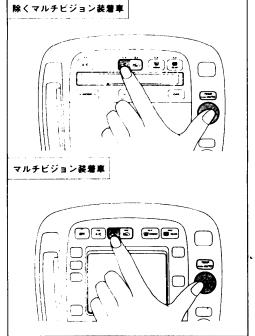

H9226 H9227

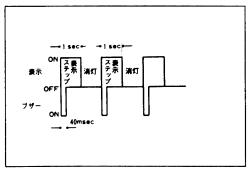

- (5) ステップ1~8の順に1秒間隔でアクチュエーターチェック(連続)を繰り返すため、目視、手で温度、風量を点検する。
- (6) ステップが移行するため点検しにくい場合は、 スイッチを押しステップを固定表示 (ステップ動作) に切り替え点検する。 スイッチを押すごとにステップが段階的に移行する。