



SOLENOID VALVE

EG0AU-01

SOLENOID VALVE INSPECTION

INSPECT SOLENOID VALVE

Using an ohmmeter, measure the resistance between the terminals

Resistance:

7.6–8.0 Ω at 25°C (77 °F)

If the resistance is not as specified, replace the solenoid valve.