


WATER TEMPERATURE SENSOR


WATER TEMPERATURE SENSOR

REMOVAL AND INSTALLATION

EG0A8-01

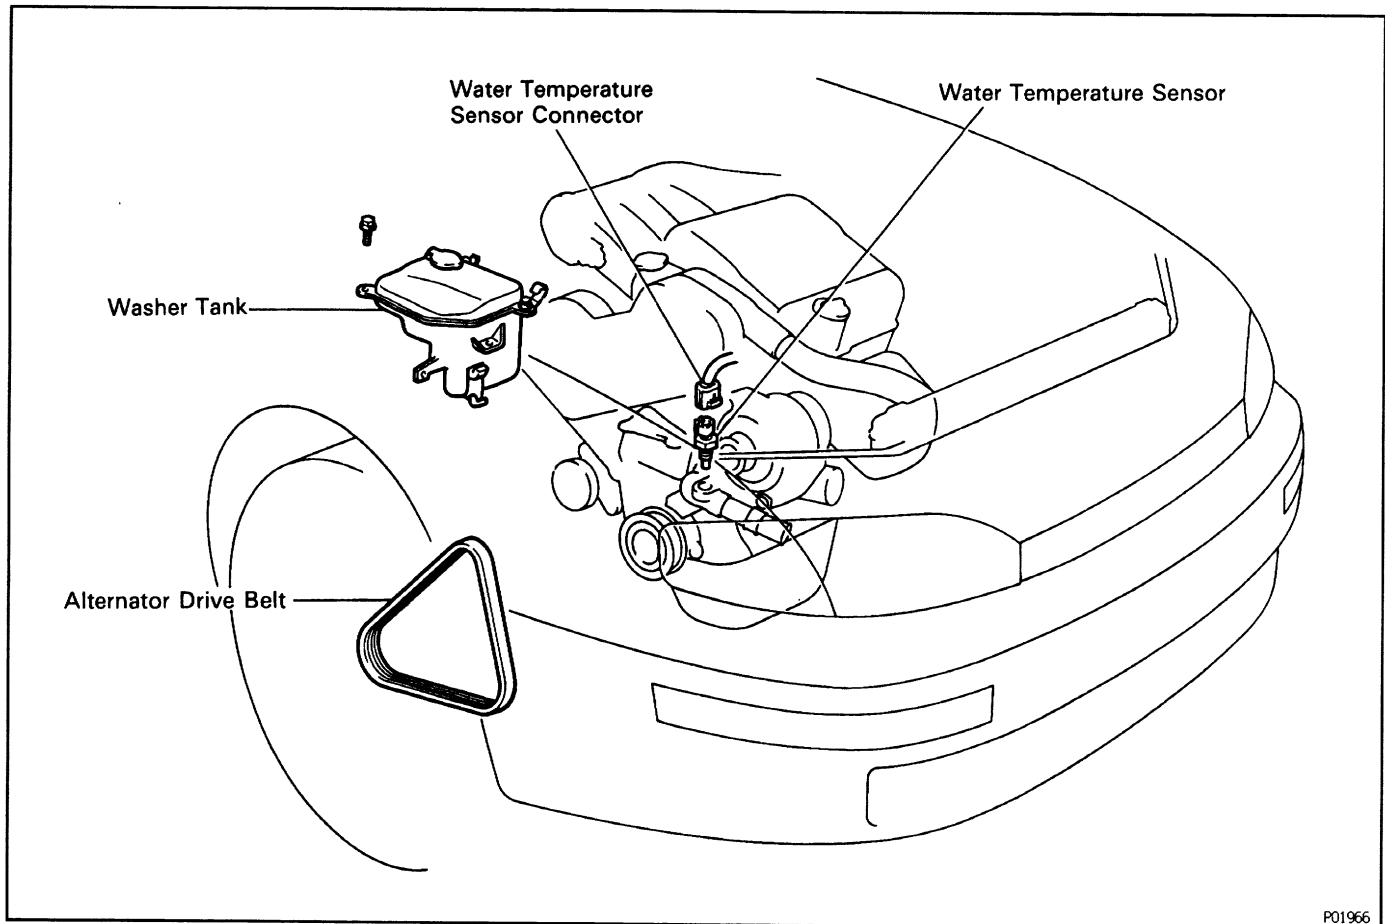

P01966

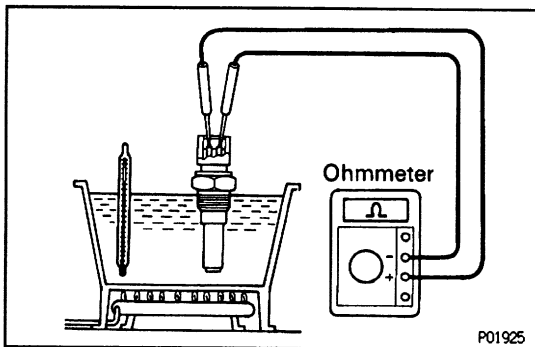

P01925

INSPECT WATER TEMPERATURE SENSOR

EG0AT-01

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

1.48 - 1.58 k Ω at 80° C (176° F)

If the resistance is not as specified, replace the sensor.